

OC Shoulder Strap (220238-000)



Note: The shoulder strap is designed to be used only with the OC 2/3 printers.

Attaching the Shoulder Strap to an OC Printer

To attach the shoulder strap to an OC printer, do the following:

1. Place the printer face down so the swivel mount, located on the bottom of the printer, is visible.



2. Place the shoulder strap bracket in the swivel mount on the OC printer, as shown below.



3. Rotate the shoulder strap bracket until it locks into place, as shown below.



Adjusting the Length of the Shoulder Strap

The length of the shoulder strap can easily be adjusted.

Grasp the slide on the shoulder strap, and then carefully pull the strip of the shoulder strap in the desired direction, to make the shoulder strap longer or shorter.

Note: Do not pull the loose end of the shoulder strap all the way through the slide or it will become detached. Leave approximately two inches of slack.



This page left intentionally blank.

Agency Approvals



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Applicable Directive

- 89/336/EEC, 73/23/EEC

Applicable Standards

- EN55022 (1998)
- EN55024 (1998)
- EN60950 (1992)

Warranty

The Company warrants that Datamax-O'Neil products are free from defects in manufacturing materials and workmanship for one (1) year from date of original purchase to Buyer/Distributor (OEMs 90 days from the date of purchase). Batteries, cables, power supplies, and other accessories will be warranted for ninety (90) days. Datamax-O'Neil makes no other warranties, expressed or implied, including implied warranties of merchantability and fitness of purpose.

If you try to repair, disassemble, or change the product in any way, or use parts not provided by Datamax-O'Neil without prior, written authorization, all warranties are void.

For complete warranty and service information, see the Warranty Card included in your printer's original packaging.

No Liability for Negligent Use

In no event shall Datamax-O'Neil be held liable for any damages whatsoever (including, without limitations, damages for loss of profits, business interruption, loss of information, or other pecuniary loss) arising out of negligence in use and care of the product.