

## Granit™ 1280i

Industrial Full Range Laser Scanner

### Quick Start Guide

Aller à [www.honeywellaidc.com](http://www.honeywellaidc.com) pour le français.  
 Vai a [www.honeywellaidc.com](http://www.honeywellaidc.com) per l'italiano.  
 Gehe zu [www.honeywellaidc.com](http://www.honeywellaidc.com) für Deutsch.  
 Ir a [www.honeywellaidc.com](http://www.honeywellaidc.com) para español.  
 Para Português, acesse [www.honeywellaidc.com.br](http://www.honeywellaidc.com.br).  
 Перейти на русскоязычный сайт [www.honeywellaidc.com](http://www.honeywellaidc.com).  
 Pro češtinu jdi na [www.honeywellaidc.com](http://www.honeywellaidc.com).  
 Pre slovenčinu chod' na [www.honeywellaidc.com](http://www.honeywellaidc.com)  
 日本語：[www.honeywellaidc.com](http://www.honeywellaidc.com) をご覧ください。  
 如要到中国 [www.honeywellaidc.com](http://www.honeywellaidc.com) (简体)。  
 查看繁体版请登陆 [www.honeywellaidc.com](http://www.honeywellaidc.com)  
 한글 [www.honeywellaidc.com](http://www.honeywellaidc.com) 로 이동합니다 .



1280-QS Rev A  
1/14


Note: Refer to your user's guide for information about cleaning your device.

For localized language versions of this document, go to [www.honeywellaidc.com](http://www.honeywellaidc.com).

### Getting Started

Turn off computer's power before connecting the scanner, then power up the computer once the scanner is fully connected.


### Power Supply Assembly (if included)

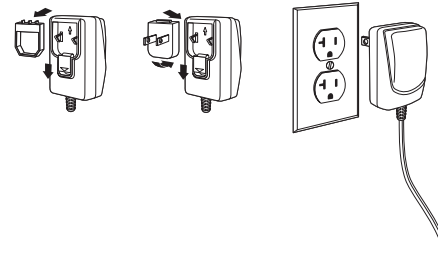


Note: The power supply must be ordered separately, if needed.

### Connecting the Scanner

When connecting the scanner, make sure the cable is pushed tightly into the scanner. Loosen the locking plate and slide it over the base of the cable connector to lock the cable in place. Tighten the screw.

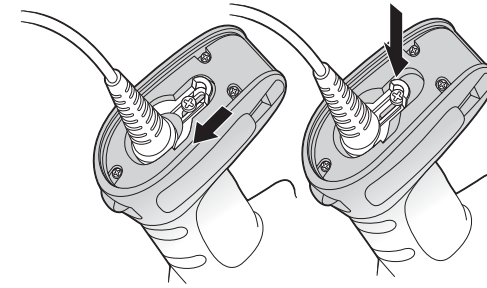

### RS232 Serial Port:

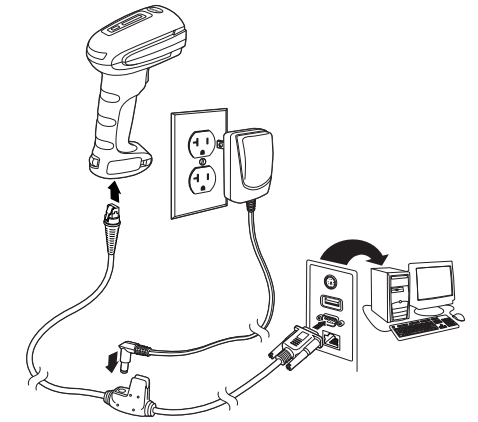

### Reading Techniques



### Standard Product Defaults

The following bar code resets all standard product default settings.



Standard Product Defaults

### Suffix

If you want a carriage return after the bar code, scan the **Add CR Suffix bar code**. To add a tab after the bar code, scan the **Add Tab Suffix bar code**. Otherwise, scan the **Remove Suffix bar code** to remove the suffixes.



Add CR Suffix



Add Tab Suffix



Remove Suffix

### Add Code ID Prefix to all Symbologies

Scan the following bar code if you wish to add a Code ID prefix to all symbologies at once.



Add Code ID Prefix To All Symbologies  
(Temporary)

Note: For a complete list of Code IDs, see the User's Guide for your product at our website, [www.honeywellaidc.com](http://www.honeywellaidc.com).

### Function Code Transmit

When this selection is enabled and function codes are contained within the scanned data, the scanner transmits the function code to the terminal. Charts of these function codes are provided in your User's Guide.



Enable  
(Default)



Disable

### Data Format Editor Instructions

The following are abbreviated instructions for entering a data format. For complete instructions refer to your User's Guide, available at our website, [www.honeywellaidc.com](http://www.honeywellaidc.com).

1. Scan the **Enter Data Format** symbol.
2. Primary/Alternate Format: scan **0** for Primary Format
3. Terminal Type: scan **099** for any terminal type
4. Code I.D.: scan **99** for any bar code type
5. Length: scan **9999** for any length bar code.
6. Editor commands: use the Programming Chart that follows.
7. Scan **Save** to save your entries.



Enter Data Format




Clear All Data Formats



Save

### Programming Chart

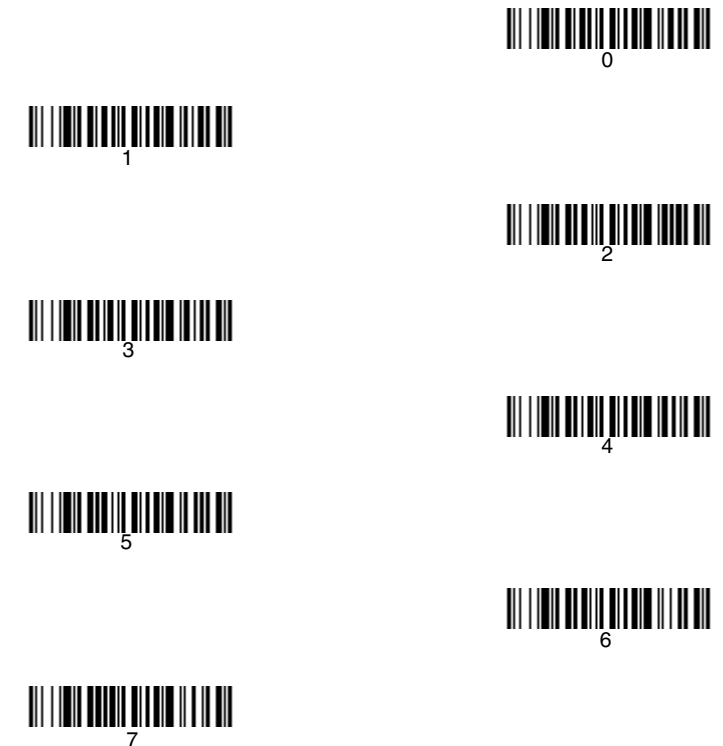



8



9



A



B



C



D



E



F



Save

### ***EZConfig-Scanning***

To access additional features for the scanner use EZConfig-Scanning, an online configuration software tool, available from our website at [www.honeywellaidc.com](http://www.honeywellaidc.com).

### ***Technical Assistance***

Contact information for technical support, product service, and repair can be found at [www.honeywellaidc.com](http://www.honeywellaidc.com).

### ***Limited Warranty***

Refer to [www.honeywellaidc.com/warranty\\_information](http://www.honeywellaidc.com/warranty_information) for your product's warranty information.

### ***Patents***

For patent information, refer to [www.honeywellaidc.com/patents](http://www.honeywellaidc.com/patents).

### ***User Documentation***

For localized versions of this document, and to download the User's Guide, go to [www.honeywellaidc.com](http://www.honeywellaidc.com).

### ***Disclaimer***

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

© 2014 Honeywell International Inc. All rights reserved.

Web Address: [www.honeywellaidc.com](http://www.honeywellaidc.com)