

CT40 HC MOBILE COMPUTER CLEANING & DISINFECTING INSTRUCTION GUIDE

In order to support your infection control protocols and help reduce the risk of cross-contamination, CT40 Healthcare mobile computers should be cleaned regularly using an approved EPA-registered hospital disinfectant following the labeling directions for use and safety precautions.¹

INTRODUCTION

The CT40 HC Healthcare mobile computer is purpose-built for the unique demands of the healthcare environment, made from disinfectant-ready materials that are designed to withstand frequent cleaning using approved disinfecting and sanitizing agents.

SAFE CLEANING PROCEDURE

Always follow your organization's infection-control protocols and the instructions for use provided by the disinfectant manufacturer.

1. Turn off the computer.
2. Ensure that the battery is properly installed in the computer to prevent liquid from entering the device.
3. Use a pre-moistened disinfectant wipe, or if using a liquid solution, apply the approved cleaning solution to a sterile cloth.

4. Wipe all surfaces of the Honeywell computer with the moistened cloth following the manufacturer's instructions for use.
 - Avoid pooling the cleaning solution on any part of the product to prevent the liquid from gaining access to the inside of the device.
 - The touchscreen, scanner and camera windows, buttons, and connector area require the most attention to prevent liquid from entering the device.
 - Keep a dry sterile cloth ready to dry the device after cleaning.
5. Use a cotton-tipped swab to clean between the buttons and in other recessed areas of the computer.
6. The cradle contacts should be cleaned monthly with a cotton-tipped swab dipped in isopropyl alcohol to provide the ideal charger-to-battery contact.

7. Let the computer completely air dry before turning on the power and/or placing it in a charger.

ABOUT THE TOUCH SCREEN AND CAMERA/SCANNER WINDOWS

After cleaning and disinfecting the Honeywell computer, it is recommended that the screen and lens be cleaned with glass cleaner to remove any streaking from the previous cleaning process.

1. Lightly moisten a lint-free sterile cloth with the approved glass cleaner.
2. Wipe the screen and lens area of the device briefly and quickly wipe dry to remove streaks or spots.

¹Centers for Disease Control and Prevention
<https://www.cdc.gov/infectioncontrol/guidelines/disinfection/index.html>


APPROVED CLEANING SOLUTIONS

The following cleaning solutions have been tested to assure safe cleaning of your disinfectant-ready CT40 HC mobile computer housing and connectors.

Damage caused by the use of cleaners other than those listed below may not be covered by the warranty.

- Azowipe® 70% IPA Disinfectant Wipes
- Clorox Dispatch® Hospital Cleaner Disinfectant Towels with Bleach
- Clorox Formula 409® Glass and Surface Cleaner
- Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes
- Clorox Healthcare Bleach Germicidal Wipes
- Clorox Healthcare Hydrogen Peroxide Wipes
- Clorox Healthcare Multi-Surface Alcohol Wipes
- Diversey Oxivir® Tb Wipes
- Diversey Virex® II 256 One-Step Disinfectant Cleaner
- Medipal® Alcohol Wipes
- PDI Easy Screen® Cleaning Wipe
- PDI Sani-Cloth® AF3 Germicidal Disposable Wipe
- PDI Sani-Cloth Bleach Germicidal Disposable Wipe
- PDI Sani-Cloth HB Sani-Germicidal Disposable Wipe
- PDI Super Sani-Cloth Germicidal Wipe
- Progressive Products Wipes Plus®
- Sani-Hands® Instant Hand Sanitizing Wipes
- Sani Professional® Disinfecting Multi-Surface Wipes
- Sterets Alcowipe®
- Veridien Viraguard®
- 10% bleach (sodium hypochlorite 0.55% and 90% water solution)
- 3% hydrogen peroxide and 97% water solution
- Dimethyl benzyl ammonium chlorides 0.125%
- Dimethyl benzyl ammonium chlorides 0.14%
- Isopropyl alcohol 55%
- Isopropyl alcohol wipes 70%
- Medical hydrogen peroxide 3%
- Medicinal alcohol 75%
- Sodium hypochlorite 0.55%
- Sodium hypochlorite solution 0.05%

**Excluding optional handstrap.*

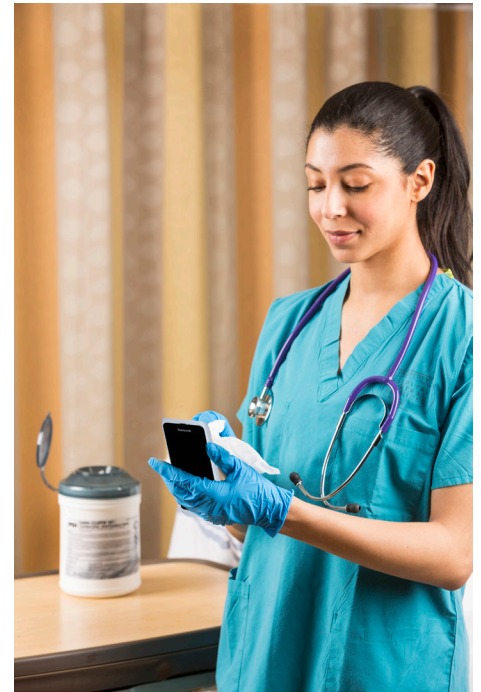

For more information

www.honeywellaidc.com

Honeywell Safety and Productivity Solutions

9680 Old Baires Road
Fort Mill, SC 29707
800-582-4263
www.honeywell.com

All trademarks are the property of their respective owners.

CT40 HC Cleaning Guide | Rev A | 11/19
© 2019 Honeywell International Inc.

THE
FUTURE
IS
WHAT
WE
MAKE IT

Honeywell